

# AHOY 207

## WASHER & DRYER INSTRUCTIONS

Liquid laundry detergent and dryer sheets are provided in the washer/dryer closet. Please note that the detergent is concentrated, so follow the label instructions to avoid using too much.

Temperature and fabric settings for the dryer are on your left as you look at the front of the machine; load size and water temperature info for the washer are on the right.

**IMPORTANT:** The washer will not run if the lid is open. After loading your dirty laundry, add detergent and close the lid so the machine will start. Please do not overload the machine or put anything sandy, flammable or otherwise risky into the unit -- treat it as you would your own.

**PLEASE CLEAN OUT THE LINT FILTER ON THE DRYER AFTER EACH USE!**